

# ASSEMBLY INSTRUCTIONS

## MODEL : BOCOLIC DINING TABLE

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior start of assembly
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly






 
### Warning !


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment

### PART LIST

A	TABLE TOP	1 PC
B	TABLE LEGS	4PCS


### HARDWARE LIST

C	FLAT WASHER 5/16		8PCS
D	SPRING WASHER 5/16		8PCS
E	HEX COMB 5/16 X 2"		8PCS
F	SPANNER 12.8		1PC

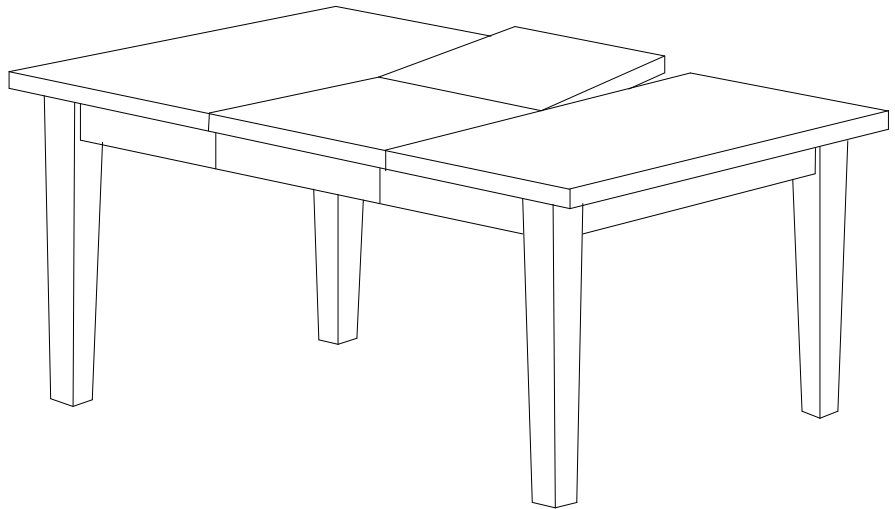

### IMPORTANT NOTE :

- \* Place all wooden part on a clean and smooth such as a rug or carpet to avoid the parts from being scratched.
- \* Before you begin, kindly follow the assembly instructions step by step.

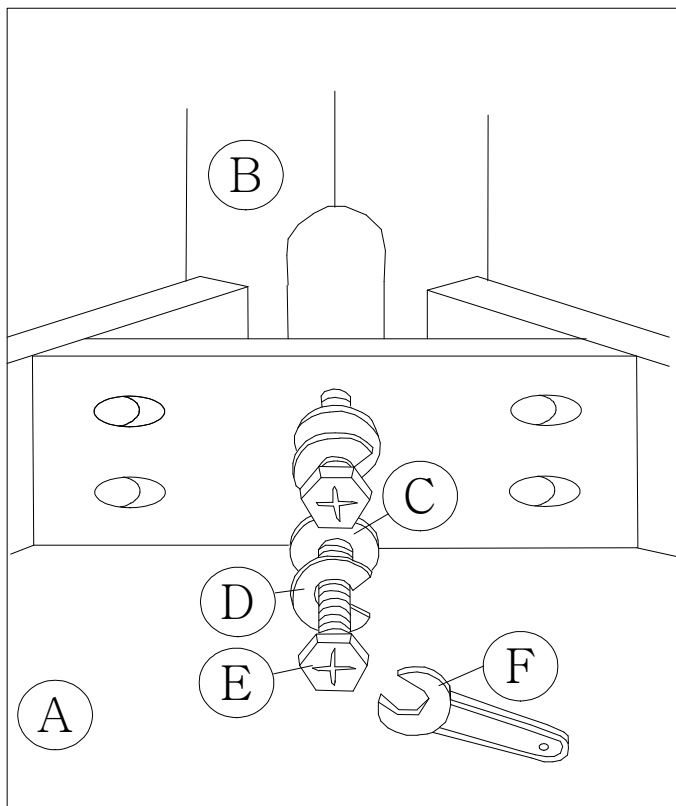

### STEP 1:

Place table top(A) face down on clean and flat soft surface to prevent from being scratched.

### STEP 2:

Position table leg(B) with holes facing to corner block holes of table frame. Insert Spring Washer(D). Flat Washer(C) & Hex Comb Screw(E) then tighten with Spanner(F) provided.

### STEP 3:

Repeat STEP 2 for other 3 legs assembly.

### STEP 4:

Revert the table for completion of table assembly.